




## Radio Output Module (ROM)

A Radio Output Module can be wall or ceiling mounted and allows other compatible devices to transmit a signal to the Telecom 400, Telecom 4000, Caresse and Caresse+, eliminating the need to hard wire a sensor or detector to the home unit.

The ROM requires extremely low maintenance with a battery life of typically 10 years.

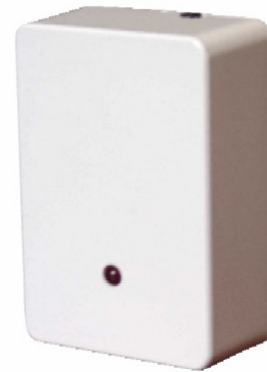

## Features

- Plain white plastic box
- Red LED indication of transmission (in addition the LED will flash if a transmission is made and the battery is low)
- Internal magnetic reed switch in parallel with the input to facilitate applications such as drawer sensing using a magnet (not supplied)
- Automatic low battery reporting
- 4 hour supervision transmissions
- Battery isolation switch for transportation
- Compatible with the range of switches supplied by Tash Inc.

## Technical Details

<b>Part Number:</b>	64604/01
<b>Fixing Details:</b>	Self adhesive hook and eye strips (supplied with ROM)
<b>Radio Frequency:</b>	312.000 MHz
<b>Battery:</b>	> Integral battery, not user replaceable  > The battery has a nominal life of 10 years, or 80,000 transmissions (including supervision transmissions) whichever is sooner
<b>Connections:</b>	1/8" jack connection, interfacing to volt free contacts with momentary operation via a cable of up to 8 feet. Supports a Normally Open (NO) contact – source current of 1mA, battery life will be reduced if contact is held closed.
<b>Dimensions:</b>	W 1.97" x H 2.92" x D 1.06" (50mm x 74mm x 27mm)
<b>Operating Temperature Range:</b>	14° F to 131° F (-10° C to +55° C)
<b>Radio Range:</b>	300 ft to 450ft (91 m to 137 m) in free space
<b>Supervision:</b>	Full
<b>Standards:</b>	FCC CFR47 part 15, Canadian RSS210
<b>Product Compatibility:</b>	Telecom 400, Telecom 4000, Caresse, Caresse+

## Contact Details

Tunstall Group Limited  
10N. Martingale Road Suite 400  
PMB259  
Schaumburg  
Illinois 60173-2411  
USA  
Tel: 1-800-892-2205  
Fax: +44 1977 660562  
Email: [sales@tunstallamerica.com](mailto:sales@tunstallamerica.com)

Tunstall Canada  
7540 Bath Road  
Mississauga  
Ontario L4T 1L2  
CANADA  
Tel: 905-677-1144  
Fax: 905-677-1121  
Email: [sales@tunstallamerica.com](mailto:sales@tunstallamerica.com)



[www.tunstallamerica.com](http://www.tunstallamerica.com)

Our policy of continual development means that product specification and appearance may change without notice. © 2008 Tunstall Group Ltd. ® TUNSTALL is a registered trade mark.